





































































Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Update	 Play / Slow	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Rec / Rec Mode	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Picture / Format	Volume-	 Vol-
Return TV	 Zoom / Size	Menu audio	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Setup / OPT /	1	 1
Txt Expand	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Display	 Info / Angle	6	 6
Menu Left	 Left	7	 7












Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

Original	Replacement	Original	Replacement





































Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Update	 Play / Slow	Menu Off	 Exit / Cancel / Clear
Reveal	 Pause / Step / Freeze	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Rec / Rec Mode	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Picture / Format	Volume-	 Vol-
Return TV	 Zoom / Size	Menu audio	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Setup / OPT /	1	 1
Txt Expand	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Display	 Info / Angle	6	 6
Menu Left	 Left	7	 7










Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		



Original	Replacement	Original	Replacement
On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
Txt Stop	 Stop / Hold	Volume+	 Vol+
Tone+	 >> / Tune+	Reveal	 Smart / List
Menu audio	 Audio / Lang I/II	Chan.Up	 CH+ / Page+
Subt.List	 Subtitle / EQ	Volume-	 Vol-
Txt Expand	 Zoom / Size	Display	 Display / Media
Sleep Timer	 Sleep / Timer	Chan.Down	 CH- / Page-
Return TV	 TV/Radio /	1	 1
Menu video	 D.Menu / Top	2	 2
Text	 Text / Goto	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Info	 Info / Angle	6	 6
Menu Left	 Left	7	 7
OK Enter	 OK	8	 8
Menu Right	 Right	9	 9



Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

