










































 


 

 















 

 
 
 
 









 
 




Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Off	 Exit / Cancel / Clear
Update	 Play / Slow	Back	 Back / Return
Reveal	 Pause / Step / Freeze	Volume+	 Vol+
Txt Stop	 Stop / Hold	Chan.Up	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Menu audio	 Audio / Lang I/II
Sleep Timer	 Sleep / Timer	Chan.Down	 CH- / Page-
Return TV	 TV/Radio /	1	 1
Menu video	 D.Menu / Top	2	 2
Text	 Text / Goto	3	 3
Txt Expand	 Zoom / Size	4	 4
TV/AV	 AV / Input / RDS	5	 5
Menu	 Menu / Home	6	 6
Display	 Display / Media	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9



Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide / EPG / -/--	Bright- Sys	 +  Shift + Exit / Cancel / Clear
0/10	 0	Tune-	 +  Shift + << /
2.Fav P/C 2.	 Fav / Marker / PC	Tune+	 +  Shift + >> /
Red	 Red / Netflix / Search	Browse	 +  Shift + Back / Return
Green	 Green / APP / Repeat	Search	 +  Shift + Red / Netflix /
Yellow	 Yellow / YouTube / Repeat	Store	 Smart / List
Blue	 Blue / Prime Video / Random	On Pip	 +  Shift + 1
Audio-	 << / Tune-	Color- S.Std	 Sound / Title
Tone-	 I<< / Preset-	Swap	 +  Shift + 2
Tone+	 >>I / Preset+	Rotate Pip	 +  Shift + 3
Audio+	 >> / Tune+	Surround	 Eject / Surround
Mix Scan	 Setup / OPT /	Still	 +  Shift + Pause / Step /
On/Tim	 +  Shift + Subtitle / EQ	4.# 16:9	 Picture / Format
Off/Tim	 +  Shift + Sleep / Timer	Nicam/Mono	 +  Shift + Green / APP /
Color+ P.Std	 +  Shift + D.Menu / Top Menu	Level L	 +  Shift + Yellow / YouTube /
Game Coo	 +  Shift + Text /	Level R/Woofer	 +  Shift + Blue / Prime
Bright+ Mode	 +  Shift + Menu / Home		

