



Original		Replacement		Original		Replacement	
	?		Zoom / Size		0		0
	Power		Power		Q.View		Display / Media
	TV/Rad		TV/Radio /		Settings		Setup / OPT /
	Guide		Guide / EPG / -/--		Up		Up
	Info		Info / Angle		Q.Menu		Menu / Home
	Ratio		Picture / Format		Left		Left
	Input		AV / Input / RDS		OK		OK
	1		1		Right		Right
	2		2		Back		Back / Return
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		Fav		Fav / Marker / PC
	7		7		P+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		AD		Audio / Lang I/II
	List		Smart / List		P-		CH- / Page-





Original	Replacement	Original	Replacement
Mute	Mute / Dimmer		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow / Brightness-	Yellow / YouTube / Repeat		
Blue /	Blue / Prime Video / Random		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Subtitle	Subtitle / EQ		
<<<	<<< / Tune-		
<<<	<<< / Preset-		
>>>	>>> / Tune+		
>>>	>>  / Preset+		
Text	Text / Goto		
T.Opt	D.Menu / Top		

