



Original	Replacement	Original	Replacement
System Off	Power	5	5
Sleep	Sleep / Timer	6	6
Tv Control On	Shift + Power	7	7
Tape	Shift + 5	8	8
DAT/MD	Shift + 2	9	9
CD	Shift + 3	0	0
Tuner	Shift + 6	>10	Guide / EPG / -/-
Phono	Shift + 0	Index/Tv Video	TV/Radio /
Video 1	Shift + 4	CH/Preset+	CH+ / Page+
Video 2	Shift + 7	CH/Preset-	CH- / Page-
Video 3	Shift + 8	DPC Mode	Picture / Format
LD	Shift + 9	Band EQ	Green / APP / Repeat
TV	Shift + Guide / EPG / -/-	Slope EQ	Yellow / YouTube / Repeat
1	1	EQ Tone On/Off	Blue / Prime Video / Random
2	2	Up	Up
3	3	Down	Down
4	4	Right	Right







Original	Replacement	Original	Replacement
System Off	Power	Stop	Stop / Hold
1	1	Play	Play / Slow
2	2	Pause	Pause / Step / Freeze
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
>10	Guide / EPG / -/--		
<<	<< / Tune-		
>>	>> / Tune+		
<<	<< / Preset-		
>>	>>  / Preset+		
D.Skip	Blue / Prime Video / Random		





