

 

 

 

 

 

 







 

 

 

 







 

 

 

 





 

 

 





 

 

 



 

 





Original		Replacement		Original		Replacement	
	Disc Direct Play 1		Red / Netflix / Search		8		8
	Disc Direct Play 2		Green / APP / Repeat		9		9
	Disc Direct Play 3		Yellow / YouTube / Repeat		Clock		Picture / Format
	1		1		0		0
	CD Edit/Check		Setup / OPT /		Mono Tuner		Subtitle / EQ
	PRGM		TV/Radio /		+10		Guide / EPG / -/-
	2		2		Band		Back / Return
	Random/Repeat		Text / Goto		Function		Menu / Home
	3		3		Pause		Pause / Step / Freeze
	GEQ		AV / Input / RDS		Power		Power
	4		4		Vol+		Vol+
	5		5		Vol-		Vol-
	T-Bass		Audio / Lang I/II		Preset		Fav / Marker / PC
	6		6		Tuning Up		Up
	Timer		Shift + Sleep / Timer		Play		Play / Slow
	7		7		Tuning Down		Down
	Sleep		Sleep / Timer		Clear		Exit / Cancel / Clear



