 









 










 













 


 


 

















 



 







Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide / EPG / -/--
	Mute		Mute / Dimmer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		OK
	5		5		SAT		Shift + 0
	6		6		FAV		Fav / Marker / PC
	7		7		Tv/Radio		TV/Radio /
	8		8		Subtitle		Subtitle / EQ
	9		9		Find		Smart / List
	0		0		Pg Up		CH+ / Page+
	Audio		Audio / Lang I/II		PgDn		CH- / Page-
	Recall		Back / Return		Red		Red / Netflix / Search
	Menu		Menu / Home		Green		Green / APP / Repeat
	Exit		Exit / Cancel / Clear		Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle		Blue		Blue / Prime Video / Random





Original	Replacement	Original	Replacement
	<<		<< / Tune-
	>>		>> / Tune+
	<		<< / Preset-
	>		>> / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Text		Text / Goto

Original	Replacement	Original	Replacement

