


 







 



Original	Replacement
	Power
	Shift + 3
	Shift + 5
	Shift + 6
	Shift + 1
	Shift + 2
	Shift + 4
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	TV/Radio /
	Exit / Cancel / Clear
	Menu / Home
	Up
	Down
	Right

Original	Replacement
	Left
	OK
	Vol+
	Vol-
	CH+ / Page+
	CH- / Page-
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0



















































 
 
 
 


















	Original	Replacement		Original	Replacement
	AV	 AV / Input / RDS			
	<</REW	 << / Tune-			
	Play	 Play / Slow			
	>>/F.FWD	 >> / Tune+			
	Rec	 Rec / Rec Mode			
	Stop	 Stop / Hold			
	Pause	 Pause / Step / Freeze			





Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Up		Up	
Down		Down	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
CD		Shift + 3	
VID 1		Eject / Surround	
Tape		Shift + 5	





















































 
 


















Original	Replacement	
VID 2	EQ SUBTITLE	Subtitle / EQ
Tuner	SHIFT + TUNER 6	Shift + 6
VID 3	RETURN BACK	Back / Return
Play	SLOW ▶	Play / Slow
>>/F.FWD	TUNE+ ▶▶	>> / Tune+
<</REW	TUNE- ◀◀	<< / Tune-
Rec	REC MODE ●	Rec / Rec Mode

Original	Replacement















Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
Down		Down	
Up		Up	
Left		Left	
Right		Right	
OK		OK	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Stop		Stop / Hold	
Pause		Pause / Step / Freeze	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	





















































 
 


















Original	Replacement	Original	Replacement
Rec	 Rec / Rec Mode		
CD	 +  Shift + 3		
VID 1	 Eject / Surround		
Tape	 +  Shift + 5		
VID 2	 Subtitle / EQ		
Tuner	 +  Shift + 6		
VID 3	 Back / Return		

Original	Replacement





Original	Replacement	Original	Replacement
Power		Power	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0/--		0	
AV		AV / Input / RDS	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
PR+		CH+ / Page+	
PR-		CH- / Page-	

Original	Replacement	Original	Replacement
Menu		Menu / Home	
Exit		Exit / Cancel / Clear	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Red/Format		Red / Netflix / Search	
Green/Sound		Green / APP / Repeat	
Yellow/[]		Yellow / YouTube / Repeat	
Blue/Timer		Blue / Prime Video / Random	
Violet/PC		TV/Radio /	
Play		Play / Slow	
>>/F.FWD		>> / Tune+	
<</REW		<< / Tune-	
Rec		Rec / Rec Mode	
Stop		Stop / Hold	





Original	Replacement	Original	Replacement
Pause	Pause / Step / Freeze		
CD	+ Shift + 3		
VID 1	Eject / Surround		
Tape	+ Shift + 5		
VID 2	Subtitle / EQ		
Tuner	+ Shift + 6		
VID 3	Back / Return		

Original	Replacement	Original	Replacement

