







 





 

 









 







 





 
 
 
 











Original	Replacement
	 Power
	 Sleep / Timer
	 Menu / Home
	 Guide / EPG / -/--
	 Info / Angle
	 TV/Radio /
	 Display / Media
	 Setup / OPT /
	 Fav / Marker / PC
	 Picture / Format
	 Blue / Prime Video / Random
	 Green / APP / Repeat
	 Subtitle / EQ
	 Sound / Title
	 Up
	 Down
	 I<< / Preset-

Original	Replacement
	 >>I / Preset+
	 OK
	 Rec / Rec Mode
	 Shift + 6
	 AV / Input / RDS
	 Shift + 5
	 Red / Netflix / Search
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold
	 1
	 2
	 3
	 4
	 5
	 6
	 7





Original	Replacement	Original	Replacement
8	8	8	8
9	9	9	9
0	0	0	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
Vol Down	Vol Down	VOL -	Vol-
Vol Up	Vol Up	+ VOL	Vol+

