



 






 



 

 

 
 
 

 


 
 









Original	Replacement
 Power	 Power
 e/Energy/Savin	 Sleep / Timer
 AV Mode	 Shift + AV / Input / RDS
 Input	 AV / Input / RDS
 TV/RAD	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.View	 Display / Media

Original	Replacement
 Vol+	 Vol+
 FAV/Mark	 Fav / Marker / PC
 P + / Page +	 CH+ / Page+
 Vol-	 Vol-
 Ratio	 Picture / Format
 P - / Page -	 CH- / Page-
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Home	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Info	 Info / Angle





Original	Replacement	Original	Replacement
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	T.Opt		Setup / OPT /
	Subtitle		Subtitle / EQ
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Simplink		Sound / Title

Original	Replacement

