





 




 




Original		Replacement		Original		Replacement	
	Function M		Vol-		3		3
	Cond M		Vol+		4		4
	On		Power		5		5
	Last M		Smart / List		6		6
	Video Off		Picture / Format		7		7
	Step/Slow-		CH- / Page-		8		8
	Step/Slow+		CH+ / Page+		9		9
	2		2		0		0
	>>I		>>I / Preset+		+10		Guide / EPG / -/-
	I<<		I<< / Preset-		Random		Blue / Prime Video / Random
	Clear		Exit / Cancel / Clear		Setup		Setup / OPT /
	Search		Red / Netflix / Search		Standby		Shift + Power
	Repeat		Green / APP / Repeat		Open/Close		Eject / Surround
	A-B		Yellow / YouTube / Repeat		Angle		Info / Angle
	Program		TV/Radio /		Audio		Audio / Lang I/II
	1		1		Subtitle		Subtitle / EQ
	<<		<< / Tune-		Dimmer		Mute / Dimmer





Original	Replacement	Original	Replacement
 Display	 Display / Media		
 Menu	 Menu / Home		
 Return	 Back / Return		
 Top Menu	 D.Menu / Top		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 OK		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		





Original	Replacement	Original	Replacement
	Open / Close		Eject / Surround
	ON		Power
	STDBY		Shift + Power
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Last M		Smart / List
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	CH+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	CH-		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Return		Back / Return
	Setup		Setup / OPT /
	Video Off		Display / Media
	Muting		Mute / Dimmer
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	<II		Shift + << /
	Pause		Pause / Step / Freeze
	II>		Shift + >> /
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	A-B		Yellow / YouTube / Repeat





















 























Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Search		Red / Netflix / Search

Original	Replacement





Original	Replacement	Original	Replacement
 Open / Close	 Eject / Surround	 Audio Sel	 Audio / Lang I/II
 On	 Power	 Display	 Display / Media
 Standby	 Shift + Power	 Dimmer	 Shift + Mute / Dimmer
 < Input Selector	 I<< / Preset-		
 Input Selector >	 >>I / Preset+		
 CH+	 CH+ / Page+		
 Up	 Up		
 Vol+	 Vol+		
 CH-	 CH- / Page-		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Vol-	 Vol-		
 Down	 Down		
 Return	 Back / Return		
 Setup	 Setup / OPT /		
 Muting	 Mute / Dimmer		

