





| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Standby |  Power |  2 |  2 |
|  Mute |  Mute / Dimmer |  3 |  3 |
|  Up |  Up |  4 |  4 |
|  Left |  Left |  5 |  5 |
|  OK |  OK |  6 |  6 |
|  Right |  Right |  7 |  7 |
|  Down |  Down |  8 |  8 |
|  Menu |  Menu / Home |  9 |  9 |
|  Exit |  Exit / Cancel / Clear |  0 |  0 |
|  Red / UHF |  Red / Netflix / Search |  EPG |  Guide / EPG / -/- |
|  Green / Audio |  Green / APP / Repeat |  Group |  Smart / List |
|  Green / Audio |  Audio / Lang I/II |  Vol+ |  Vol+ |
|  Yellow / Pause |  Yellow / YouTube / Repeat |  Vol- |  Vol- |
|  Yellow / Pause |  Pause / Step / Freeze |  CH+ |  CH+ / Page+ |
|  Blue / Recall |  Blue / Prime Video / Random |  CH- |  CH- / Page- |
|  Blue / Recall |  Back / Return |  Page+ |  Shift + CH+ / |
|  1 |  1 |  Page- |  Shift + CH- / |



