

 





 
 
 
 
 

 

 

 
 
 


 




 


 
 
 




Original	Replacement	Original	Replacement
	Power		Yellow / YouTube / Repeat
	Text		Blue / Prime Video / Random
	Input		D.Menu / Top
	1		Play / Slow
	2		Pause / Step / Freeze
	3		Back / Return
	4		Exit / Cancel / Clear
	5		Up
	6		Down
	7		Left
	8		Right
	9		OK
	0		Vol+
	Guide		Vol-
	CH List		Menu / Home
	Red / Netflix / Search		Mute / Dimmer
	Green / APP / Repeat		CH+ / Page+



