

 

 





Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		0		0
	O/Play		Subtitle / EQ		Del		Exit / Cancel / Clear
	Play		Play / Slow		+10		Guide / EPG / -/--
	Clock/Timer		Shift + Sleep / Timer		iPod		Red / NetfliX / Search
	Program		TV/Radio /		CD		Shift + 3
	Vol+		Vol+		Radio/Ext In		Green / APP / Repeat
	Vol-		Vol-		I<<		I<< / Preset-
	Mute		Mute / Dimmer		Pause		Pause / Step / Freeze
	1		1		>>I		>>I / Preset+
	2		2		<<		<< / Tune-
	3		3		Stop		Stop / Hold
	4		4		>>		>> / Tune+
	5		5		Sound		Sound / Title
	6		6		D.Bass		D.Menu / Top
	7		7		Preset EQ		Setup / OPT /
	8		8		Display/Dimmer		Info / Angle





Original		Replacement		Original		Replacement	
	Auto Off		Zoom / Size				
	iPod Menu		Display / Media				
	Play Menu		Menu / Home				
	Radio Menu		Smart / List				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	OK		OK				
	Input Level		AV / Input / RDS				
	Eject iPod		Shift + Right				
	Eject CD		Shift + Left				
	Auto Preset		Picture / Format				

