 

 

 


































 

 









 

 

 

















 



Original	Replacement
 [+]	 Zoom / Size
 Power	 Power
 Source/[?]	 AV / Input / RDS
 >>	 >> / Tune+
 Red/Rec	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 <<	 << / Tune-
 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Blue	 Blue / Prime Video / Random
 Play	 Play / Slow
 Radio	 TV/Radio /
 [=]	 Text / Goto
 []	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up
 Down	 Down

Original	Replacement
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Original	Replacement
 [i+]	 Info / Angle
 I-III	 Audio / Lang I/II
 [I12]	 Subtitle / EQ
 [:≡]	 Guide / EPG / -/-
 [<>]	 Picture / Format
 P<P	 Fav / Marker / PC
 ♪/Smart	 Smart / List
 []/Smart	 Display / Media

Original	Replacement





Original	Replacement
Power SAT	Shift + Power
Power	Power
Source/[?]	AV / Input / RDS
Source SAT	Shift + AV / Input / RDS
>>	>> / Tune+
Red SAT	Red / Netflix / Search
<<	<< / Tune-
Green SAT	Green / APP / Repeat
Yellow SAT	Yellow / YouTube / Repeat
Stop	Stop / Hold
Play	Play / Slow
Blue SAT	Blue / Prime Video / Random
Radio	TV/Radio /
[=]	Text / Goto
Up	Up
Up SAT	Shift + Up
Down	Down

Original	Replacement
Down SAT	Shift + Down
Left SAT	Shift + Left
Left	Left
Right SAT	Shift + Right
Right	Right
OK SAT	Shift + OK
OK	OK
[] SAT	Shift + Back / Return
[]	Back / Return
Menu SAT	D.Menu / Top
Menu	Menu / Home
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
P+ SAT	Shift + CH+ /
P+	CH+ / Page+
P- SAT	Shift + CH- /



Page-






















Original	Replacement
	CH PAGE / CH- / Page-
	SHIFT + TV 1 / Shift + 1
	TV 1 / 1
	SHIFT + DVD 2 / Shift + 2
	DVD 2 / 2
	SHIFT + CD-STB 3 / Shift + 3
	CD-STB 3 / 3
	SHIFT + VIDEO 4 / Shift + 4
	VIDEO 4 / 4
	SHIFT + TAPE 5 / Shift + 5
	TAPE 5 / 5
	SHIFT + TUNER 6 / Shift + 6
	TUNER 6 / 6
	SHIFT + AUX-HDD 7 / Shift + 7
	AUX-HDD 7 / 7
	SHIFT + USB 8 / Shift + 8
	USB 8 / 8

Original	Replacement
	SHIFT + BLUETOOTH 9 / Shift + 9
	BLUETOOTH 9 / 9
	SHIFT + HDMI-BAT 0 / Shift + 0
	HDMI-BAT 0 / 0
	ANGLE INFO / Info / Angle
	LANG I/II AUDIO / Audio / Lang I/II
	FORMAT PICTURE / Picture / Format
	PC FAV MARKER / Fav / Marker / PC





Original	Replacement
 Power	 Power
 >>	 >> / Tune+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Radio	 TV/Radio /
 []	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]	 Info / Angle
 I-II	 Audio / Lang I/II





Original	Replacement
Power AMP	Shift + Power
Power	Power
Source/[?]	AV / Input / RDS
>>	>> / Tune+
>> AMP	>>I / Preset+
Red	Red / Netflix / Search
Rec	Rec / Rec Mode
<< AMP	I<< / Preset-
Green	Green / APP / Repeat
<<	<< / Tune-
Yellow	Yellow / YouTube / Repeat
Stop	Stop / Hold
Blue	Blue / Prime Video / Random
Play	Play / Slow
Radio AMP	TV/Radio /
[=] AMP	Text / Goto
[]	Back / Return

Original	Replacement
Menu	Menu / Home
Menu AMP	D.Menu / Top
Up AMP	Shift + Up
Up	Up
Down	Down
Down AMP	Shift + Down
Left	Left
Left AMP	Shift + Left
Right	Right
Right AMP	Shift + Right
OK	OK
OK AMP	Shift + OK
Vol+ AMP	Shift + Smart / List
Vol+	Vol+
Vol-	Vol-
Mute AMP	Shift + Mute / Dimmer
Mute	Mute / Dimmer





Original	Replacement
P+	CH+ / Page+
P+ AMP	SHIFT + CH+ /
P- AMP	SHIFT + CH- /
P-	CH- / Page-
1 AMP	SHIFT + TV 1
1	TV 1
2 AMP	SHIFT + DVD 2
2	DVD 2
3 AMP	SHIFT + CD-STB 3
3	CD-STB 3
4 AMP	SHIFT + VIDEO 4
4	VIDEO 4
5 AMP	SHIFT + TAPE 5
5	TAPE 5
6 AMP	SHIFT + TUNER 6
6	TUNER 6
7 AMP	SHIFT + AUX-HDD 7

Original	Replacement
7	AUX-HDD 7
8 AMP	SHIFT + USB 8
8	USB 8
9 AMP	SHIFT + BLUETOOTH 9
9	BLUETOOTH 9
0 AMP	SHIFT + HDMI-BAT 0
0	HDMI-BAT 0
[i+]	ANGLE INFO
I-II	LANG I/II AUDIO
[1 2] AMP	EQ SUBTITLE
[+]	SIZE ZOOM
[<>]	FORMAT PICTURE
P<P	PC FAV MARKER
Smart	LIST SMART
[]/Smart	MEDIA DISPLAY

