



Original	Replacement
Power	Power
Source Search	Source
Computer	Comp / Video
Video	Shift + Blank / Mute
USB	Mode
Lan	Shift + Left
Screen Fit 1	Shift + Enter
1	Shift + Mode
2	Shift + Play / Stop
2D/3D 3	Shift + Down
3	Volt / Focus
4	Shift + Auto
5	Shift + - / Stop
6	Shift + Help / Info
7	Eco / Aspect
Auto	Auto
Aspect	Shift + Menu

Original	Replacement
8	3D / Invert
Color Mode 9	Shift + Source
9	Shift + 3D /
0	Shift + Comp / Video
Menu	Menu
Esc	Shift + Power
User	Shift + Up
Pointer	Shift + Right
Up	Up
Down	Down
Left	Left
Right	Right
Enter	Enter
Page+	Shift + Vol + / Page +
Page-	Shift + Vol - / Page -
E-Zoom+	+ / Play
E-Zoom-	- / Stop





	Original	Replacement	
	Vol+	Vol	Vol + / Page +
	Vol-	Vol	Vol - / Page -
	AV Mute	Blank	Blank / Mute
	Freeze	Freeze	Freeze / Timer
	?/Help	Help	Help / Info

Original	Replacement

