




 







 


































| Original | Replacement | Original | Replacement |
|---------------|------------------------------------------------------------------------------------------------------------|-----------------|-----------------------------------------------------------------------------------------------------------------|
| Update |  Pause / Step / Freeze | Yellow |  Yellow / YouTube / Repeat |
| Reveal |  Play / Slow | Blue |  Blue / Prime Video / Random |
| 2.Fav P/C 2. |  Fav / Marker / PC | Audio- |  Shift + Vol- |
| 1 |  1 | Audio+ |  Shift + Vol+ |
| 2 |  2 | Tone- |  << / Tune- |
| 3 |  3 | Surround |  Eject / Surround |
| 4 |  4 | Level L |  Shift + Left |
| 5 |  5 | Level R/Woofers |  Shift + Right |
| 6 |  6 | Display |  Display / Media |
| 7 |  7 | Mute |  Mute / Dimmer |
| 8 |  8 | Txt Stop |  Stop / Hold |
| 9 |  9 | Sleep Timer |  Sleep / Timer |
| Guide -/-- 1. |  Guide / EPG / -/-- | Return TV |  TV/Radio / |
| 0/10 |  0 | Menu video |  D.Menu / Top |
| Chan.Down |  CH- / Page- | Text |  Text / Goto |
| Red |  Red / Netflix / Search | TV/AV |  AV / Input / RDS |
| Green |  Green / APP / Repeat | Menu |  Menu / Home |



| Original | Replacement | Original | Replacement |
|--------------|---------------------------------------------------------------------------------------------------------|----------|-------------|
| Menu Up |  Up | | |
| On/Off |  Power | | |
| Menu Left |  Left | | |
| OK Enter |  OK | | |
| Menu Right |  Right | | |
| Menu Off |  Exit / Cancel / Clear | | |
| Menu Down |  Down | | |
| Back |  Back / Return | | |
| Volume+ |  Vol+ | | |
| Chan.Up |  CH+ / Page+ | | |
| Volume- |  Vol- | | |
| Menu audio / |  Audio / Lang I/II | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

