



 


 



























Original	Replacement
	Power
	Source
	[=]
	I-II
	[...]
	Red
	Green
	Yellow
	Blue
	Menu
	EPG
	Up
	<<
	Play
	Pause
	>>
	Down

Original	Replacement
	Option
	[i+]
	Vol+
	Stop
	Page+
	Vol-
	Mute
	Page-
	1
	2
	3
	FAV
	4
	5
	6
	J/Slideshow
	7

Shift + Setup / OPT / Tools

Info / Angle

Vol+

Stop / Hold

CH+ / Page+

Vol-

Mute / Dimmer

CH- / Page-

1

2

3

Fav / Marker / PC

4

5

6

TV/Radio /

7



