



 

 



 














 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Setup	 Setup / OPT /
 Zoom	 Zoom / Size
 Rotate	 Picture / Format
 Info	 Info / Angle
 Repeat	 Shift + Green / APP / REPEAT
 Goto	 Text / Goto
 Edit	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Browser	 AV / Input / RDS
 Movie	 TV/Radio /
 Photo	 Smart / List
 Music	 Sound / Title
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 Stop	 Stop / Hold
 Home	 Menu / Home
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 >>	 >>  / Preset+
 Vol-	 Vol-
  <<	  << / Preset-
 1	 1
 2	 2
 3	 3
 >>	 >> / Tune+
 4	 4





Original		Replacement	
5	5	TAPE 5	5
6	6	TUNER 6	6
FR	<<	TUNE- ◀	<< / Tune-
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
HDMI	Red/HDMI	NETFLIX SEARCH	Red / Netflix / Search
AV	Blue/AV	Prime Video RANDOM	Blue / Prime Video / Random
COPY	Green/Copy	APP REPEAT	Green / APP / Repeat
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat

Original		Replacement	

