






 


 

 





 

 







 



 



 

















 



 







Original	Replacement
 Power	 Power
 DTV/ATV	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Aspect	 Zoom / Size

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 V+	 Vol+
 V-	 Vol-
 Mute	 Mute / Dimmer
 MTS	 Eject / Surround
 Timer	 Sleep / Timer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green APP REPEAT		Rec Menu TOP MENU D.MENU
	Yellow YouTube REPEAT A-B		T-Shift OPT-TOOLS SETUP
	Blue Prime Video RANDOM		Still LANG I/II AUDIO
	<< TUNE- <<		
	>> TUNE+ >>		
	I<< PRESET- I<<		
	>>I PRESET+ >>I		
	Play SLOW		
	Pause STEP - FREEZE		
	Stop HOLD		
	TTX GOTO TEXT		
	Subtitle EQ SUBTITLE		
	DTV/Radio/Repeat PROGRAM TV/RADIO		
	List LIST SMART		
	FAV PC FAV MARKER		
	EPG GUIDE EPG		
	Rec REC MODE		

