





 




 






 


 

 



Original	Replacement
Power	Power
Power TV	+  Shift + Power
Tv Vol+	Vol+
Open/Close	Eject / Surround
AV Input TV	AV / Input / RDS
Tv Vol-	Vol-
Internet	Smart / List
1	1
2	2
3	3
Skype	+  Shift + Green / APP /
4	4
5	5
6	6
3D	+  Shift + 3
7	7
8	8

Original	Replacement
9	9
PIP	Picture / Format
Cancel	+  Shift + Exit / Cancel / Clear
0	0
Audio	Audio / Lang I/II
Secondary	Sound / Title
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Status	Info / Angle
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Pop-Up Menu	Display / Media
Top Menu	D.Menu / Top





Original		Replacement		Original		Replacement	
	Up		Up				
	Home		Menu / Home				
	Left		Left				
	OK		OK				
	Right		Right				
	Option		Setup / OPT /				
	Down		Down				
	Return		Back / Return				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

