
 


 


 
 









 





 



 







 

 

 

 

 







Original	Replacement
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /
 0	 0

Original	Replacement
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/-
 Top Menu	 D.Menu / Top
 Up	 Up
 Disc Menu	 Menu / Home
 Left	 Left
 Enter / OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	HDD		Shift + 7
	DVD		Shift + 2
	Time Slip		TV/Radio /
	Dubbing		Picture / Format
	Rec Mode		Shift + Rec / Rec Mode
	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ
	AD		Sound / Title
			O))/Audio
			Sat Link
			Audio / Lang I/II
			Smart / List

