



Original	Replacement	Original	Replacement
Power	Power	Up/CH+	Up
Mute	Mute / Dimmer	Left	Left
Red/EPG	Red / Netflix / Search	Vol-	Vol-
Red/EPG	Guide / EPG / -/--	OK	OK
Tv/Radio	TV/Radio /	Right	Right
Pause	Pause / Step / Freeze	Vol+	Vol+
Green/Audio	Green / APP / Repeat	Down/CH-	Down
Green/Audio	Audio / Lang I/II	Menu	Menu / Home
Info	Info / Angle	Exit	Exit / Cancel / Clear
Recall	Back / Return	A-Z	Setup / OPT /
Yellow/Pg	Yellow / YouTube / Repeat	SAT	Shift + 0
Yellow/Pg	Sleep / Timer	FAV	Fav / Marker / PC
Yellow/Pg	Shift + CH+ /	1	1
TXT	Text / Goto	2	2
Blue/PgDw/Forma	Blue / Prime Video / Random	3	3
Blue/PgDw/Forma	Shift + CH- /	4	4
Blue/PgDw/Forma	Picture / Format	5	5

Original	Replacement	Original	Replacement
Power	Power	Up/CH+	Up
Mute	Mute / Dimmer	Left	Left
Red/EPG	Red / Netflix / Search	Vol-	Vol-
Red/EPG	Guide / EPG / -/--	OK	OK
Tv/Radio	TV/Radio /	Right	Right
Pause	Pause / Step / Freeze	Vol+	Vol+
Green/Audio	Green / APP / Repeat	Down/CH-	Down
Green/Audio	Audio / Lang I/II	Menu	Menu / Home
Info	Info / Angle	Exit	Exit / Cancel / Clear
Recall	Back / Return	A-Z	Setup / OPT /
Yellow/Pg	Yellow / YouTube / Repeat	SAT	Shift + 0
Yellow/Pg	Sleep / Timer	FAV	Fav / Marker / PC
Yellow/Pg	Shift + CH+ /	1	1
TXT	Text / Goto	2	2
Blue/PgDw/Forma	Blue / Prime Video / Random	3	3
Blue/PgDw/Forma	Shift + CH- /	4	4
Blue/PgDw/Forma	Picture / Format	5	5



