



Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Channel+	 CH+ / Page+
 Sleep	 Sleep / Timer	 DBB/Tone	 Display / Media
 Clock	 Shift + Sleep / Timer	 Vol+	 Vol+
 Power	 Power	 Channel-	 CH- / Page-
 CD	 Shift + 3	 Mute	 Mute / Dimmer
 USB	 Shift + 8	 Vol-	 Vol-
 Bluetooth	 Shift + 9	 Info	 Info / Angle
 Tuner	 Shift + 6	 Up/Tune+	 Up
 Analog In	 Shift + 5	 Option	 Shift + Setup / OPT / Tools
 Optical In	 Smart / List	 Left	 Left
 I<<	 I<< / Preset-	 Enter	 OK
 Play	 Play / Slow	 Right	 Right
 Pause	 Pause / Step / Freeze	 Search	 Red / Netflix / Search
 >>I	 >>I / Preset+	 Down/Tune-	 Down
 Speaker A/B	 Audio / Lang I/II	 Setup	 Setup / OPT /
 Stop	 Stop / Hold	 1	 1
 Volume A/B	 Subtitle / EQ	 2	 2





Original	Replacement	Original	Replacement
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
+10	+10	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
PROGRAM	Program	PROGRAM TV/RADIO	TV/Radio /
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer

