 



























 



 



 





 

 



 



 















 





 










 




 




Original	Replacement	Original	Replacement
 Standby	 Power	 0	 0
 Prog	 TV/Radio /	 10+	 Guide / EPG / -/-
 Display	 Display / Media	 Time	 Sleep / Timer
 Open/Close	 Eject / Surround	 Setup	 Setup / OPT /
 N/P	 Smart / List	 Up	 Up
 1	 1	 Repeat	 Green / APP / Repeat
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 Subtitle	 Subtitle / EQ	 Play	 Play / Slow
 4	 4	 Right	 Right
 5	 5	 Func-	 CH- / Page-
 6	 6	 Down	 Down
 Language	 Audio / Lang I/II	 Func+	 CH+ / Page+
 7	 7	 PBC	 Picture / Format
 8	 8	 Stop	 Stop / Hold
 9	 9	 Zoom	 Zoom / Size
 Angle	 Info / Angle	 Step	 Shift + Pause / Step / Freeze





	Original	Replacement		Original	Replacement
		Resume		AV / Input / RDS	
		Mute		Mute / Dimmer	
		Title		Sound / Title	
		A-B		Yellow / YouTube / Repeat	
		Menu		Menu / Home	
		I<<		I<< / Preset-	
		>>I		>>I / Preset+	
		<<		<< / Tune-	
		>>		>> / Tune+	
		Slow		Shift + Play /	
		Pause		Pause / Step / Freeze	
		Func Select		D.Menu / Top	

