 



 





 









 

 

 

 

 











 







 











 











Original	Replacement	Original	Replacement
	Power		Power
	Display		Display / Media
	Mute		Mute / Dimmer
	TV		TV/Radio /
	AV		AV / Input / RDS
	Scart		Shift + 7
	PC		Shift + Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/--
	CH.List		Smart / List
	SRS		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Enter		Fav / Marker / PC
	Menu		Menu / Home
	Up		Up
	TTX/MIX		Text / Goto
	Left		Left
	OK		OK
	Right		Right
	Wide		Picture / Format
	Down		Down
	MPX		Setup / OPT /
	Vol+		Vol+
	CH+		CH+ / Page+





Original	Replacement	Original	Replacement
	Vol-		
	CH- / Page-		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Info / Angle		
	Subtitle / EQ		
	Audio / Lang I/II		
	Exit / Cancel / Clear		
	Zoom / Size		
	Stop / Hold		

