



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 Mute	 Mute / Dimmer
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left

Original	Replacement
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Pg Up	 CH+ / Page+
 Down/CH-	 Down
 Pg Dn	 CH- / Page-
 TV/Radio	 TV/Radio /
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Sub-T	 Subtitle / EQ
 TTX	 Text / Goto
 Timer	 Guide / EPG / -/-
 List	 Smart / List
 Pause	 Pause / Step / Freeze
 Sleep	 Sleep / Timer





	Original	Replacement	Original	Replacement
	 Ratio	 Picture / Format		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		

