
 


 











Original	Replacement	Original	Replacement
 POWER	 Power	 8	 8
 MUTE	 Mute / Dimmer	 9	 9
 P. MODE	 Picture / Format	 -/--	 Shift + Guide / EPG / -/--
 S. MODE	 Sound / Title	 0	 0
 TV / RADIO	 TV/Radio /	 BACK	 Back / Return
 NICAM	 Shift + Audio / Lang I/II	 REC. MENU	 D.Menu / Top
 DISPLAY	 Display / Media	 PLAY / PAUSE	 Play / Slow
 ZOOM / PC.A	 Shift + Zoom /	 SKIP PREV	 I<< / Preset-
 SLEEP	 Sleep / Timer	 SKIP NEXT	 >>I / Preset+
 EDIT	 Shift + Text /	 REC	 Rec / Rec Mode
 1	 1	 STOP	 Stop / Hold
 2	 2	 REW	 << / Tune-
 3	 3	 FWD	 >> / Tune+
 4	 4	 CH+	 CH+ / Page+
 5	 5	 SOURCE	 AV / Input / RDS
 6	 6	 VOL+	 Vol+
 7	 7	 CH-	 CH- / Page-





Original	Replacement
 VOL-	 Vol-
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 DOWN	 Down
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 USB	 Shift + 8
 ON/OFF SETUP / ON/OFF	 Setup / OPT /
 MIX / MENU	 Smart / List
 INDEX / PCB	 Text / Goto
 SIZE ZOOM / SIZE	 Zoom / Size
 REVEAL / SUBT. / REP.	 Shift + Green / APP /
 SUBTITLE A-B	 Subtitle / EQ

Original	Replacement
 UPDATE / A-B	 Shift + Yellow / YouTube /
 SUBPAGE /	 Audio / Lang I/II
 HOLD / FRE. / SUB. T.	 Shift + Stop /
 RED / INFO	 Shift + Info / Angle
 RED / INFO	 Red / Netflix / Search
 Green / Angle	 Info / Angle
 Green / Angle	 Green / APP / Repeat
 YELLOW / SLOW	 Yellow / YouTube / Repeat
 BLUE / EJECT	 Blue / Prime Video / Random
 EJECT	 Eject / Surround

