

















































 





















Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	USB/Media 1		Display / Media
	USB/Media 1		Shift + 8
	Play/Pause/Text		Text / Goto
	Play/Pause/Text		Play / Slow
	Play/Pause/Text		Pause / Step / Freeze
	Stop/Index		Stop / Hold
	Rec/Media2		Rec / Rec Mode
	Rec/Media2		Shift + Display / Media
	I<</Hold		I<< / Preset-
	>>I/Size		>>I / Preset+
	<</S.Page		<< / Tune-
	>>/Reveal		>> / Tune+
	I-II/Nicam		Shift + Picture / Format
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Tv/Radio		TV/Radio /
	i		Info / Angle
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Menu		Menu / Home
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Mouse		Shift + OK
	Smart		Smart / List
	Exit		Exit / Cancel / Clear
	CH+		CH+ / Page+
	EPG		Guide / EPG / -/-
	VOL+		Vol+
	CH-		CH- / Page-





Original	Replacement
Open/Close	Eject / Surround
Vol-	Vol-
D.Setup	Setup / OPT /
Picture	Picture / Format
D.Menu	D.Menu / Top
Sound	Sound / Title
D.Title	Shift + Sound / Title
P.Size	Zoom / Size
D.Prog	Shift + TV/Radio / Program
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

