



Original	Replacement	Original	Replacement
	Power		Power
	Ext Link		D.Menu / Top
	Tv Aspect/AV Link		Picture / Format
	Tv/Text		Text / Goto
	1		1
	2		2
	3		3
	Tracking/V-Lock+ / CH+		CH+ / Page+
	4		4
	5		5
	6		6
	Tracking/V-Lock- / CH-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	AV		Shift + AV / Input / RDS
	0		0
	-/--		Guide / EPG / -/--
	Vol-		Vol-
	Input Select		AV / Input / RDS
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	ShowView		Info / Angle
	Prog Play		Smart / List
	Audio		Audio / Lang I/II
	Pause/Step		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Menu		Menu / Home
	Up		Up
	Play		Play / Slow
	Exit		Exit / Cancel / Clear
	Left		Left
	<<		<< / Tune-





Original	Replacement
	Power
	Picture / Format
	Text / Goto
	1
	2
	3
	CH+ / Page+
	4
	5
	6
	CH- / Page-
	7
	8
	9
	Vol+
	AV / Input / RDS
	0

Original	Replacement
	Guide / EPG / -/--
	Vol-
	Up
	Red / Netflix / Search
	Green / APP / Repeat
	Right
	Yellow / YouTube / Repeat
	Shift + Vol+
	Blue / Prime Video / Random
	Shift + CH+ /
	Down
	Left
	Shift + Vol-
	Shift + CH- /

