

 

 

 

 



 

 











 



 

 









 

 

 





 



 



 



 







Original	Replacement	Original	Replacement
 Power	 Power	 i	 Info / Angle
 1	 1	 TXT	 Text / Goto
 2	 2	 AUX	 Shift + 7
 3	 3	 Blue / R	 Blue / Prime Video / Random
 *+	 >>I / Preset+	 Up	 Up
 4	 4	 P+	 CH+ / Page+
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol+
 -*	 I<< / Preset-	 Yellow	 Yellow / YouTube / Repeat
 7	 7	 OK	 OK
 8	 8	 Green/Timer	 Sleep / Timer
 9	 9	 Green/Timer	 Green / APP / Repeat
 O+	 >> / Tune+	 Left	 Left
 -O	 << / Tune-	 Vol-	 Vol-
 0/AV	 AV / Input / RDS	 Down	 Down
 0/AV	 0	 P-	 CH- / Page-
 0/AV	 Display / Media	 Red	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	Audio / Mute	MUTE		Mute / Dimmer
	Audio / Mute	LANG I/II		Audio / Lang I/II



 

 

 





 


 



















 


 



 
 


 

 



 



 



 











Original		Replacement		Original		Replacement	
	Power		Power				
	<		Left				
	>		Right				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	P+		CH+ / Page+				
	P-		CH- / Page-				





Original	Replacement	Original	Replacement
 Power	 Power	 i	 Info / Angle
 1	 1	 TXT	 Text / Goto
 2	 2	 AUX	 Shift + 7
 3	 3	 Blue / R	 Blue / Prime Video / Random
 *+	 >>I / Preset+	 P+	 CH+ / Page+
 4	 4	 Up	 Up
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol+
 -*	 I<< / Preset-	 Yellow	 Yellow / YouTube / Repeat
 7	 7	 OK	 OK
 8	 8	 Green/Timer	 Green / APP / Repeat
 9	 9	 Green/Timer	 Sleep / Timer
 O+	 >> / Tune+	 Left	 Left
 -O	 << / Tune-	 Vol-	 Vol-
 0/AV	 AV / Input / RDS	 P-	 CH- / Page-
 0/AV	 0	 Down	 Down
 P/C-ATS	 Display / Media	 Red	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	Audio / Mute	 Mute / Dimmer		
	Audio / Mute	 Audio / Lang I/II		

