



Original	Replacement	Original	Replacement
 Operate	 Power	 Show View	 Info / Angle
 Open / Close	 Eject / Surround	 TV / DVD	 TV/Radio /
 1	 1	 Timer On / Off	 Sleep / Timer
 2	 2	 Time Shift	 Text / Goto
 3	 3	 Dubbing	 Vol-
 CH +	 CH+ / Page+	 P in P	 Picture / Format
 4	 4	 Input	 AV / Input / RDS
 5	 5	 HDD	 Shift + 7
 6	 6	 Start Menu	 Menu / Home
 CH -	 CH- / Page-	 DVD	 Shift + 2
 7	 7	 Rec List / DVD Top Menu	 Smart / List
 8	 8	 Up	 Up
 9	 9	 Original / Playlist / DVD Menu	 D.Menu / Top
 Direct	 Setup / OPT /	 Left	 Left
 -/--	 Guide / EPG / -/--	 Set / Enter	 OK
 0	 0	 Right	 Right
 C / Erase	 Shift + Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
	Down		Down
	Return		Back / Return
	Yellow		Blue / Prime Video / Random
	Blue		Red / Netflix / Search
	Red		Green / APP / Repeat
	Green		Yellow / YouTube / Repeat
	<< REV		<< / Tune-
	Play		Play / Slow
	>> FWD		>> / Tune+
	Still / Pause		Pause / Step / Freeze
	Stop / Live		Stop / Hold
	Slow		Shift + Play /
	I<< / <II F.Adv		I<< / Preset-
	>>I / F.Adv II>		>>I / Preset+
	Replay		Sound / Title
	Skip Search		Shift + Red / Netflix /
	Function		Zoom / Size
	Angle		Shift + Info / Angle
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	REC		Rec / Rec Mode
	REC Stop		Shift + Stop /
	REC Pause		Shift + Pause / Step /
	Rec Mode		Shift + Rec / Rec Mode
	Direct REC TV		Shift + Eject / Surround
	Chapter Mark / RGB OFF		Fav / Marker / PC
	On Screen Tamper Proof		Vol+
	Display / Back Light		Display / Media

