



Original		Replacement		Original		Replacement	
	1		1		I<< Skip		I<< / Preset-
	2		2		>>I Skip		>>I / Preset+
	3		3		Pause		Pause / Step / Freeze
	4		4		Stop		Stop / Hold
	5		5		Play		Play / Slow
	6		6		Tuner Band		TV/Radio /
	7		7		Store		Text / Goto
	8		8		Mode		Menu / Home
	9		9		Skip/Scan+		Up
	10		Guide / EPG / -/--		Skip/Scan-		Down
	10+ CD Player		0		1 Lights		Shift + 1
	PROG		Shift + TV/Radio / Program		2 Lights		Shift + 2
	Random		Blue / Prime Video / Random		Volume+		Vol+
	Repeat		Green / APP / Repeat		Volume-		Vol-
	Remain		Subtitle / EQ				
	<< Search		<< / Tune-				
	>> Search		>> / Tune+				

