



Original	Replacement
 Display	 Display / Media
 Input Setup	 Setup / OPT /
 Speaker Setup	 Menu / Home
 Level Settings	 Back / Return
 Enter	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Volume+	 Vol+
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 EQ Preset	 Subtitle / EQ
 System Off 1	 1
 System Off 2	 2
 System Off 3	 3
System Off 4	4

Original	Replacement
 System Off 5	 5
 Device On AMP/PROC/Phono/	 Power
 Device Off AMP	 Shift + Power
 System On PROC	 6
 System ON Phono	 7
 System On TV 2	 8
 System On Tape	 9
 System On Tape	 0
 System On AUX	 Smart / List
 System ON CDR	 Shift + Display / Media
 System ON CDR	 Shift + Smart / List





Original	Replacement
Device On 1	Shift + 1
Device On 2	Shift + 2
Device On 3	Shift + 3
Device Off	Power
Info/RDS	Info / Angle
Time	Sleep / Timer
Display	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Replacement
Clear	Exit / Cancel / Clear
Check	Picture / Format
Prog	TV/Radio /
Input Setup	Setup / OPT /
Level Settings	Back / Return
Enter	OK
EQ Preset	Subtitle / EQ
Speaker Setup	Menu / Home
Up	Up
Down	Down
Right	Right
Left	Left
Volume+	Vol+
Volume-	Vol-
Pause	Pause / Step / Freeze
Mute	Mute / Dimmer
<<	<< / Tune-





Original	Replacement	Original	Replacement
	>>		>> / Tune+
	<<		<< / Preset-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Preset+
	+10		Fav / Marker / PC
	Folder+		CH+ / Page+
	Folder-		CH- / Page-
	Rep A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Open/Close		Eject / Surround
	Random		Blue / Prime Video / Random
	-10		Guide / EPG / -/--

Original	Replacement	Original	Replacement



 

 



Original	Replacement
Device On 1	Shift + 1
Device On 2	Shift + 2
Device On 3	Shift + 3
Device Off	Power
Info/RDS	Info / Angle
Display	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Band	TV/Radio /

Original	Replacement
FM Mode	Zoom / Size
Auto	Red / Netflix / Search
Mem	Blue / Prime Video / Random
Clear	Exit / Cancel / Clear
Volume+	Vol+
Volume-	Vol-
Scroll+	CH+ / Page+
Scroll-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Mute	Mute / Dimmer
Speaker Setup	Menu / Home
Select	Text / Goto
Input Setup	Setup / OPT /





Original	Replacement
 Level Settings	 Back / Return
 EQ Preset	 Subtitle / EQ

Original	Replacement

