



 













Original	Replacement	Original	Replacement
 Line 1	 Power		
 Line 2	 Mute / Dimmer		
 Balanced	 Play / Slow		
 Tape 1	 Pause / Step / Freeze		
 Tape 2	 Stop / Hold		
 Phono	 Rec / Rec Mode		
 Source Direct On/Off	 << / Tune-		

