 



 


 
 









| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Input |  AV / Input / RDS |
|  Mute |  Mute / Dimmer |  Left |  Left |
|  Red |  Red / Netflix / Search |  Enter |  OK |
|  Green |  Green / APP / Repeat |  Right |  Right |
|  Yellow |  Yellow / YouTube / Repeat |  Exit |  Exit / Cancel / Clear |
|  Blue |  Blue / Prime Video / Random |  Down |  Down |
|  YPbPr |  Shift + 3 |  TV Display |  Display / Media |
|  MTS |  Audio / Lang I/II |  Vol+ |  Vol+ |
|  VGA |  Shift + 2 |  S.M |  Sound / Title |
|  TV |  Shift + 1 |  CH+ |  CH+ / Page+ |
|  AV |  Shift + AV / Input / RDS |  Vol- |  Vol- |
|  HDMI |  Shift + 0 |  P.M |  Picture / Format |
|  EPG |  Guide / EPG / -/-- |  CH- |  CH- / Page- |
|  Aspect |  Setup / OPT / |  1 |  1 |
|  Aspect |  Shift + Picture / Format |  2 |  2 |
|  Menu |  Menu / Home |  3 |  3 |
|  Up |  Up |  4 |  4 |

| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Power |  MUTE |  SHIFT | |
|  TV |  DVD |  SAT |  AUX |
|  SLOW |  STEP-FREEZE |  HOLD |  REC MODE |
|  TUNE- |  TUNE+ |  PRESET- |  PRESET+ |
|  TITLE |  LANG I/II |  EQ |  SURROUND |
|  SOUND |  AUDIO |  SUBTITLE |  PROGRAM |
|  FORMAT |  ZOOM |  SLEEP |  TV RADIO |
|  TOP MENU |  OPT-TOOLS |  GOTO |  RDS |
|  D.MENU |  SETUP |  TEXT |  AV INPUT |
|  HOME |  ANGLE |  INFO | |
|  MENU |  OK |  RETURN |  BACK |
|  CLEAR |  EXIT |  CANCEL | |
|  VOL + |  SMART |  MEDIA |  CH PAGE + |
|  VOL - |  DISPLAY |  TV |  DVD |
|  CH + |  CH PAGE + |  CO- STB |  TAPE |
|  CH - |  CH PAGE - |  VIDEO |  TUNER |
|  1 |  1 |  AUX-HDD |  USB |
|  2 |  2 |  HDMI - BAT |  BLUETOOTH |
| 3 | 3 | GUIDE EPG | PC |
| 4 | 4 | NETFLIX | APP |
| | | YouTube | Prime Video |
| | | SEARCH | REPEAT |
| | | REPEAT A-B | RANDOM |
| | | Mandis SHOP | www.mandis.tv |





| Original | | Replacement | |
|---------------|--------|----------------------|-------------------|
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| . | . | PC FAV MARKER | Fav / Marker / PC |
| 0 | 0 | HDMI - BAT 0 | 0 |
| RECALL | Recall | RETURN BACK | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Replacement | |
|----------|--|-------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  YPbPr |  Shift + Menu / |
|  CC |  Subtitle / EQ |
|  MTS |  D.Menu / Top |
|  VGA |  Sleep / Timer |
|  DTV strength |  Setup / OPT / |
|  TV |  Shift + 1 |
|  AV |  AV / Input / RDS |
|  HDMI |  Shift + 0 |
|  CHList |  Smart / List |
|  EPG |  Guide / EPG / -/-- |
|  FAV |  Fav / Marker / PC |

| Original | Replacement |
|---|--|
|  Aspect |  Zoom / Size |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Source |  Shift + AV / Input / RDS |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Tv Display |  TV/Radio / |
|  Vol+ |  Vol+ |
|  S.M |  Sound / Title |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  P.M |  Picture / Format |
|  CH- |  CH- / Page- |
|  1 |  1 |





| Original | | Replacement | | Original | Replacement |
|----------|--------|-------------------|--------------------------|----------|-------------|
| 2 | 2 | DVD 2 | 2 | | |
| 3 | 3 | CD - STB 3 | 3 | | |
| 4 | 4 | VIDEO 4 | 4 | | |
| 5 | 5 | TAPE 5 | 5 | | |
| 6 | 6 | TUNER 6 | 6 | | |
| 7 | 7 | AUX - HDD 7 | 7 | | |
| 8 | 8 | USB 8 | 8 | | |
| 9 | 9 | BLUETOOTH 9 | 9 | | |
| . | . | SHIFT + GUIDE EPG | Shift + Guide / EPG / -- | | |
| 0 | 0 | HDMI - BAT 0 | 0 | | |
| RECALL | Recall | RETURN BACK | Back / Return | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

