



 







 



 







 















































Original		Replacement		Original		Replacement	
	Power		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Guide		Guide / EPG / -/--
	2		2		CH-		CH- / Page-
	3		3		Rec		Rec / Rec Mode
	4		4		MTS		Smart / List
	5		5		Aspect		Picture / Format
	6		6		Menu		Menu / Home
	7		7		Up		Up
	8		8		Source		AV / Input / RDS
	9		9		Left		Left
	TV/Radio		TV/Radio /		Enter		OK
	0		0		Right		Right
	Fav		Fav / Marker / PC		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Down		Down
	Reclist		Setup / OPT /		Display		Display / Media
	Reclist		Shift + Smart / List		Red		Red / Netflix / Search



