
























Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Sel	 Smart / List
 3	 3	 Down	 Down
 4	 4	 FAV	 Fav / Marker / PC
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Red/Subtitle	 Red / Netflix / Search
 8	 8	 AV	 AV / Input / RDS
 9	 9	 TV/R	 TV/Radio /
 Quality/P-	 CH- / Page-	 Blue/Info	 Blue / Prime Video / Random
 0	 0	 Green/PIP	 Green / APP / Repeat
 Recall/P+	 CH+ / Page+	 Yellow/EPG	 Yellow / YouTube / Repeat
 Menu	 Menu / Home		
 Exit	 Exit / Cancel / Clear		
 Up	 Up		

Original	Replacement	Original	Replacement
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 PICTURE	 TOP MENU	 OPT-TOOLS	 GOTO
 D.MENU	 SETUP	 TEXT	 RDS
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 VOL +	 SMART	 MEDIA	 CH PAGE +
 VOL -	 DISPLAY	 TV	 DVD
 4	 TAPE	 5	 TUNER
 AUX-HDD	 USB	 7	 BLUETOOTH
 GUIDE EPG	 HDMI-BAT	 8	 PC
 NETFLIX	 APP	 9	 FAV MARKER
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM
 www.mandis.tv			

