







 



























 











Original	Replacement
	 Power
	 Mute / Dimmer
	 AV / Input / RDS
	 Picture / Format
	 Sound / Title
	 Audio / Lang I/II
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0

Original	Replacement
	 Guide / EPG / +/-
	 Info / Angle
	 Menu / Home
	 Text / Goto
	 Setup / OPT /
	 Back / Return
	 Up
	 Left
	 OK
	 Right
	 Down
	 Vol-
	 Vol+
	 CH- / Page-
	 CH+ / Page+
	 Red / Netflix / Search
	 Green / APP / Repeat



