
 



 



 








 



 





 



 



 







 
 
 

 

 



 






 
 








 
 




 





 





 









Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Setup	 Setup / OPT /	 +10	 Guide / EPG / -/-
 Digest	 Smart / List	 Clear	 Exit / Cancel / Clear
 Lang	 Shift + Audio / Lang I/II	 Play	 Play / Slow
 Display	 Display / Media	 Up	 Up
 1	 1	 Stop	 Stop / Hold
 2	 2	 Left	 Left
 3	 3	 Select	 OK
 Zoom	 Zoom / Size	 Right	 Right
 4	 4	 Pause/Step	 Pause / Step / Freeze
 5	 5	 Down	 Down
 6	 6	 Slow	 Shift + Play /
 A-B Repeat	 Yellow / YouTube / Repeat	 F.BWD	 << / Tune-
 7	 7	 F.FWD	 >> / Tune+
 8	 8	 Prev.	 I<< / Preset-
 9	 9	 Next	 >>I / Preset+
 1/All Repeat	 Green / APP / Repeat	 Subtitle	 Subtitle / EQ

Original	Replacement	Original	Replacement
 0	 0	 +10	 Guide / EPG / -/-
 Clear	 Exit / Cancel / Clear	 Play	 Play / Slow
 Up	 Up	 Stop	 Stop / Hold
 Left	 Left	 Select	 OK
 Right	 Right	 Pause/Step	 Pause / Step / Freeze
 Down	 Down	 Slow	 Shift + Play /
 F.BWD	 << / Tune-	 F.FWD	 >> / Tune+
 Prev.	 I<< / Preset-	 Next	 >>I / Preset+
 Subtitle	 Subtitle / EQ		





Original	Replacement	Original	Replacement
 Angle	 Info / Angle		
 Audio	 Audio / Lang I/II		
 Volume+	 Vol+		
 Program	 Shift + TV/Radio / Program		
 Menu/PBC	 Menu / Home		
 Title/Ret.	 Sound / Title		
 Volume-	 Vol-		
 Search	 Red / Netflix / Search		
 Tv Sys	 TV/Radio /		
 Tv Mode	 Fav / Marker / PC		
 Mute	 Mute / Dimmer		

Original	Replacement	Original	Replacement

