











 

 

 


 
 



 

 



 

















 

 



 

 


 
 
 
















Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	DTV/VCR		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Yellow		Yellow / YouTube / Repeat
	Down		Down
	CH-		CH- / Page-
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Favorite		Fav / Marker / PC
	Recall		Back / Return
	Lang		Lang
	Info		Info / Angle
	EPG		Guide / EPG / -/-





Original	Replacement
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 TTX	 Text / Goto
 Subtitle	 Subtitle / EQ

Original	Replacement

