


 







 

 






 



 

 

 


 

 

 

 

 




 

 

 

 










Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 Time/Text	 Text / Goto
 Power Tv	 Shift + Power	 Disc Skip	 Smart / List
 Power	 Power	 Audio	 Audio / Lang I/II
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Angle	 Info / Angle
 3	 3	 Picture Mode	 Picture / Format
 Vol+	 Vol+	 I<</Prev	 I<< / Preset-
 4	 4	 >>I/Next	 >>I / Preset+
 5	 5	 Repeat	 Green / APP / Repeat
 6	 6	 Sur	 Shift + Eject / Surround
 Vol-	 Vol-	 << Scan/Slow	 << / Tune-
 7	 7	 Scan/Slow >>	 >> / Tune+
 8	 8	 Search Mode	 Red / Netflix / Search
 9	 9	 Replay	 Fav / Marker / PC
 Tv/Video	 TV/Radio /	 Play	 Play / Slow
 Clear	 Exit / Cancel / Clear	 Pause	 Pause / Step / Freeze
 0	 0	 Stop	 Stop / Hold





Original	Replacement
Up	Up
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down
Return	Back / Return
Top Menu	D.Menu / Top
Menu	Menu / Home

Original	Replacement

