























































 

















 

 



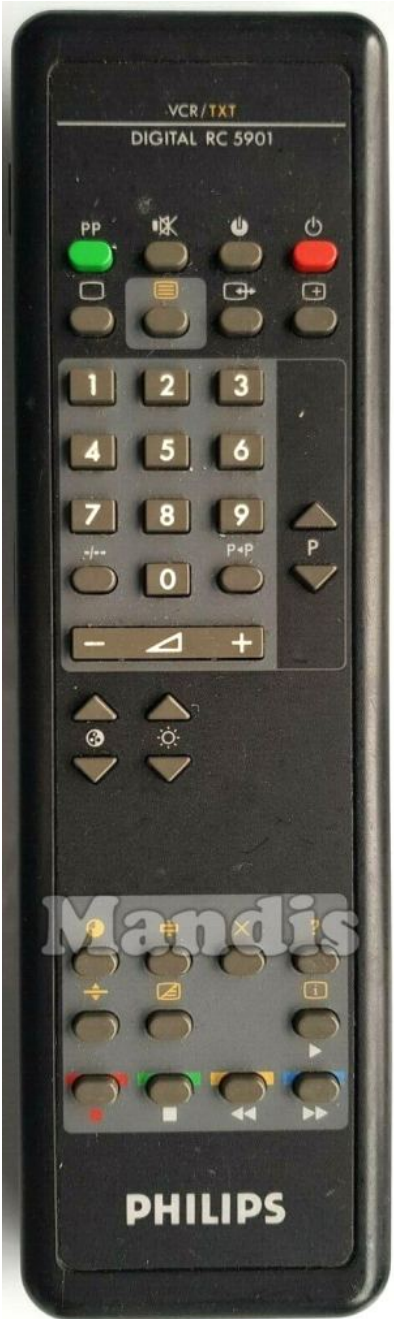
Original	Replacement	Original	Replacement
	PP		Back / Return
	Mute		Mute / Dimmer
	(I)		OK
	Power		Power
	[]		Display / Media
	[=]		Text / Goto
	[↔]		AV / Input / RDS
	[+]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P+		CH+ / Page+
	-/--		Guide / EPG / -/--
	0		0
	P<P		Fav / Marker / PC
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Colour+		Right
	Brighness-		Down
	Colour-		Left
	Brighness+		Up
	●		Setup / OPT /
	□		Stop / Hold
	X		Exit / Cancel / Clear
	[?]		D.Menu / Top
	◆		Zoom / Size
	[/ =]		Sleep / Timer










































































Original	Replacement	Original	Replacement
	 Info / Angle		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		

 





Original		Replacement		Original		Replacement	
	PP		Back / Return		-/--		Guide / EPG / -/--
	Mute		Mute / Dimmer		0		0
	(I)		OK		P<P		Fav / Marker / PC
	Power		Power		P-		CH- / Page-
	[]		Display / Media		Vol-		Vol-
	[↔]		AV / Input / RDS		Vol+		Vol+
	[+]		Smart / List		●		Setup / OPT /
	1		1		□		TV/Radio /
	2		2		X		Exit / Cancel / Clear
	3		3		?		D.Menu / Top
	4		4		Size		Zoom / Size
	5		5		[=]		Text / Goto
	6		6		[/=]		Sleep / Timer
	7		7		Play		Play / Slow
	8		8		Rec		Rec / Rec Mode
	9		9		Stop		Stop / Hold
	P+		CH+ / Page+		<<		<< / Tune-



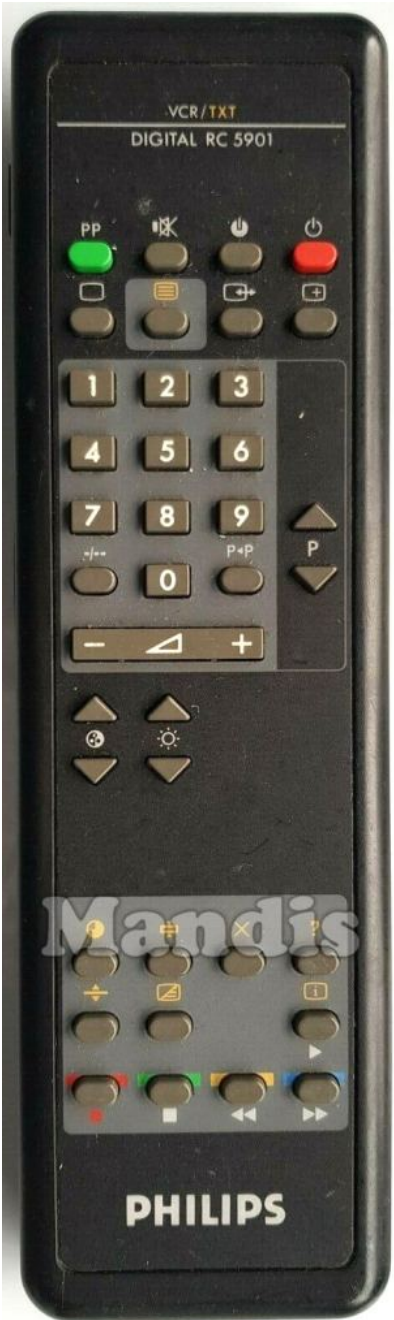

Original	Replacement	Original	Replacement
 >>	 >> / Tune+		

