













 


 






 






 


 











 



 

 





 

 














 

 







 
 




 
 
 



Original	Replacement	Original	Replacement
I<<	 I<< / Preset-		 Green / APP / Repeat
>>I	 >>I / Preset+		 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS		 Blue / Prime Video / Random
 Power	 Power	 1	 1
 World	 Display / Media	 2	 2
 Netflix	 Shift + Red / Netflix /	 3	 3
 YouTube	 Shift + Yellow / YouTube /	 4	 4
 Music-Photo-Movi	 Setup / OPT /	 5	 5
 Rec	 Rec / Rec Mode	 6	 6
 Play	 Play / Slow	 7	 7
 Pause	 Pause / Step / Freeze	 8	 8
 Stop	 Stop / Hold	 9	 9
 Lang.	 Audio / Lang I/II	 Tv	 TV/Radio /
 <<	 << / Tune-	 0	 0
 >>	 >> / Tune+		 Zoom / Size
 Subtitle	 Subtitle / EQ	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Q.Menu	 D.Menu / Top





Original	Replacement
 Vol+	 Vol+
 Ch+	 CH+ / Page+
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 Ch-	 CH- / Page-
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 →(☺)←	 Guide / EPG / -/--
 Fav	 Fav / Marker / PC
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 *1/●	 Shift + Setup / OPT / Tools
 *2/Search	 Sound / Title

Original	Replacement
 [≡]	 Shift + Text /
 Text	 Text / Goto

