



Original	Replacement	Original	Replacement
Vol+	Vol+	Random	Blue / Prime Video / Random
Vol-	Vol-	AUX →	OK
Power	Power	Tape I-II	5
Mono	Audio / Lang I/II	Band	D.Menu / Top
Sleep	Sleep / Timer	CD	Shift + 3
Disc Change	AV / Input / RDS	Play/<>	Play / Slow
Open/Close	Eject / Surround	Pause	Pause / Step / Freeze
Display	Display / Media	I<</Track	I<< / Preset-
Morphing	Subtitle / EQ	>>/Track	>>  / Preset+
←0	Left	Stop	Stop / Hold
0→	Right	<<	<< / Tune-
Disc 1	1	>>	>> / Tune+
Disc 2	2		
Disc 3	3		
Clear	Exit / Cancel / Clear		
PGM	TV/Radio /		
Repeat	Green / APP / Repeat		

