 

 





 











 



 



 

 













 



 



 

 





 



 

 





Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	D.Setup/Index		D.Menu / Top		Up		Up
	Mute		Mute / Dimmer		Info		Info / Angle
	Play/Hold		Play / Slow		Left		Left
	Pause/Hold		Pause / Step / Freeze		Ok		OK
	Stop/Mix		Stop / Hold		Right		Right
	<</Cancel		<< / Tune-		Exit		Exit / Cancel / Clear
	>>/Size		>> / Tune+		Down		Down
	I<</Reveal		I<< / Preset-		Vol+		Vol+
	>>I/Subpage		>>I / Preset+		Eject/Auto		Smart / List
	S.Mode		Sound / Title		Ch+		CH+ / Page+
	Subtitle		Subtitle / EQ		Vol-		Vol-
	P.Mode		Picture / Format		Display		Display / Media
	Sleep		Sleep / Timer		Ch-		CH- / Page-
	Nicam/Audio		Setup / OPT /		1		1
	D.Menu/Text		Text / Goto		2		2
	Input		AV / Input / RDS		3		3





Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
10+	→←/10+
0	0
TITLE FAV	Fav/Title
A-B	Red/A-B
PROG	Green/Prog
Yellow	Yellow/Repeat
GOTO	Blue/Goto
STEP	Step
ASPECT	Aspect
ANGLE	Angle

Original	Replacement
VIDEO 4	4
TAPE 5	5
TUNER 6	6
AUX - HDD 7	7
USB 8	8
BLUETOOTH 9	9
GUIDE EPG	Guide / EPG / -/--
HDMI - BAT 0	0
PC FAV MARKER	Fav / Marker / PC
NETFLIX SEARCH	Red / Netflix / Search
APP REPEAT	Green / APP / Repeat
YouTube REPEAT A-B	Yellow / YouTube / Repeat
Prime Video RANDOM	Blue / Prime Video / Random
SHIFT + STEP - FREEZE	Shift + Pause / Step /
SHIFT + FORMAT PICTURE	Shift + Picture / Format
SHIFT + ANGLE INFO	Shift + Info / Angle

