
 






 

 





| Original | Replacement |
|--|--|
|  Power |  Power |
|  HDMI |  Shift + 0 |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Fav |  Fav / Marker / PC |
|  0 |  0 |
|  Scan |  Display / Media |
|  EPG |  Guide / EPG / -/-- |
|  Info |  Info / Angle |

| Original | Replacement |
|---|---|
|  Menu |  Menu / Home |
|  Up / CH+ |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left / Vol- |  Vol- |
|  Left / Vol- |  Left |
|  OK |  OK |
|  Right / Vol+ |  Vol+ |
|  Right / Vol+ |  Right |
|  P+ |  CH+ / Page+ |
|  Down / CH- |  Down |
|  Radio |  TV/Radio / |
|  P- |  CH- / Page- |
|  TV/AV |  AV / Input / RDS |
|  Red / Lang |  Audio / Lang I/II |
|  Red / Lang |  Red / Netflix / Search |
|  Yellow / List |  Yellow / YouTube / Repeat |
|  Yellow / List |  Smart / List |





| | Original | Replacement | Original | Replacement |
|--|----------|----------------------------|----------|-------------|
| | | Green / Text | | |
| | | Green / Text | | |
| | | Blue / L/R | | |
| | | Sleep | | |
| | | Sleep / Timer | | |
| | | Shift + TUNE- / << / | | |
| | | Shift + TUNE+ / >> / | | |
| | | Rec / Rec Mode | | |
| | | Play / Slow | | |
| | | Pause / Step / Freeze | | |
| | | Stop / Hold | | |
| | | I<< / Preset- | | |
| | | << / Tune- | | |
| | | >> / Tune+ | | |
| | | >>I / Preset+ | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

