



Original	Replacement	Original	Replacement
Disc 1	Left	5	5
Disc 2	Up	6	6
Disc 3	Right	Repeat	Green / APP / Repeat
CD-R	OK	7	7
Display	Display / Media	8	8
Stop	Stop / Hold	9	9
Pause	Pause / Step / Freeze	Fader	Mute / Dimmer
Play	Play / Slow	10/0	0
<<	<< / Tune-	>10 button"/> >10	Guide / EPG / -/--
>>	>> / Tune+	Program	TV/Radio /
I<<	I<< / Preset-	Check	Smart / List
>>I	>>I / Preset+	Clear	Exit / Cancel / Clear
1	1	Skip	Back / Return
2	2	Skip Set	CH- / Page-
3	3	Skip Clear	CH+ / Page+
Random	Blue / Prime Video / Random	Play Mode	Setup / OPT /
4	4		

