























 















































Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
Sub-T	Subtitle / EQ	FAV	Fav / Marker / PC
Lang	Audio / Lang / I / II	Down / CH-	Down
Mute	Mute / Dimmer	Tv / Radio	TV / Radio /
EPG	Guide / EPG / - / -	1	1
Goto	Shift + Text /	2	2
Page+	CH+ / Page+	3	3
TTX	Text / Goto	Recall	Back / Return
Repeat	Shift + Green / APP /	4	4
Page-	CH- / Page-	5	5
Menu	Menu / Home	6	6
Up / CH+	Up	Info	Info / Angle
Exit	Exit / Cancel / Clear	7	7
Vol-	Vol-	8	8
Left	Left	9	9
OK	OK	0	0
Right	Right	<< / Tune-	<< / Tune-







Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Sub-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 Lang	 Audio / Lang I/II	 Down/CH-	 Down
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/--	 1	 1
 Goto	 Shift + Text /	 2	 2
 Page+	 CH+ / Page+	 3	 3
 TTX	 Text / Goto	 Recall	 Back / Return
 Repeat	 Shift + Green / APP /	 4	 4
 Page-	 CH- / Page-	 5	 5
 Menu	 Menu / Home	 6	 6
 Up/CH+	 Up	 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 7	 7
 Left	 Left	 8	 8
 Vol-	 Vol-	 9	 9
 OK	 OK	 0	 0
 Right	 Right	 <<	 << / Tune-



