 









 








 





 




















 

 

 







Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 Mode	 Setup / OPT /
 Menu	 Menu / Home
 Bluetooth	 Shift + 9
 Dimmer	 Shift + Dimmer / Mute / Dimmer
 Clock	 Shift + Sleep / Timer
 Alarm	 Smart / List
 Sleep	 Sleep / Timer
 Snooze	 Display / Media
 Info	 Info / Angle
 Intro	 Text / Goto
 Folder Down	 CH- / Page-
 Folder Up	 CH+ / Page+
 Stop	 Stop / Hold
 Play / Pause	 Play / Slow
 <<	 << / Tune-

Original	Replacement
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Up	 Up
 Repeat	 Green / APP / Repeat
 Left	 Left
 OK	 OK
 Right	 Right
 A-B	 Yellow / YouTube / Repeat
 Down	 Down
 Mute	 Mute / Dimmer
 POP	 Shift + 1
 Vol+	 Vol+
 Classic	 Shift + 3
 Rock	 Shift + 2
 Vol-	 Vol-
 Flat	 Shift + 4
 1	 1





	Original	Replacement	Original	Replacement
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	Scan	 D.Menu / Top		
	0	 0		
	Prog	 TV/Radio /		

