

| Original    | Replacement                                                                                         | Original      | Replacement                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------------------------------------|
| On/Off      |  Power             | Chan.Down     |  CH- / Page-                   |
| Mute        |  Mute / Dimmer     | 1             |  1                             |
| Menu audio  |  Audio / Lang I/II | 2             |  2                             |
| Sleep Timer |  Sleep / Timer     | 3             |  3                             |
| Return TV   |  TV/Radio /        | 4             |  4                             |
| Text        |  Text / Goto       | 5             |  5                             |
| TV/AV       |  AV / Input / RDS  | 6             |  6                             |
| Menu        |  Menu / Home       | 7             |  7                             |
| Menu Up     |  Up                | 8             |  8                             |
| Camera      |  Info / Angle     | 9             |  9                            |
| Menu Left   |  Left            | Guide -/-- 1. |  Guide / EPG / -/--          |
| OK Enter    |  OK              | 0/10          |  0                           |
| Menu Right  |  Right           | 2.Fav P/C 2.  |  Fav / Marker / PC           |
| Menu Down   |  Down            | Red           |  Red / Netflix / Search      |
| Volume+     |  Vol+            | Green         |  Green / APP / Repeat        |
| Chan.Up     |  CH+ / Page+     | Yellow        |  Yellow / YouTube / Repeat   |
| Volume-     |  Vol-            | Blue          |  Blue / Prime Video / Random |



The image shows a black remote control for a Mandis TV. At the top, there are three buttons: a red power button, a black 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons: 'TV', 'DVD', 'SAT', and 'AUX'. The next row contains 'SLOW', 'STEP - FREEZE', 'HOLD', and 'REC MODE'. The following row has 'TUNE-' (left arrow), 'TUNE+' (right arrow), 'PRESET-' (left double arrow), and 'PRESET+' (right double arrow). The next row includes 'TITLE', 'LANG III', 'EQ', and 'SURROUND'. The following row has 'SOUND', 'AUDIO', 'SUBTITLE', and an up arrow. The next row includes 'FORMAT', 'SIZE', 'TIMER', and 'PROGRAM'. The following row has 'PICTURE', 'ZOOM', 'SLEEP', and 'TV / RADIO'. The next row includes 'TOP MENU', 'OPT-TOOLS', 'GOTO', and 'RDS'. The final row in this section has 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. Below these are 'HOME' and 'ANGLE' buttons. The next row has 'MENU' and 'INFO'. The center features a directional pad with 'OK' in the middle. The following row has 'CLEAR', 'EXIT', 'CANCEL', 'LIST', 'SMART', 'MEDIA', 'DISPLAY', 'RETURN', and 'BACK'. The next row has 'VOL +', 'CH +', and 'CH -'. The following row has 'TV', 'DVD', and 'CD - STB'. The next row has '1', '2', and '3'. The following row has '4', '5', and '6'. The next row has 'AUX - HDD', 'USB', and 'BLUETOOTH'. The following row has '7', '8', and '9'. The next row has 'TUNER', 'HDMI - SAT', and 'PC'. The following row has 'GUIDE', '0', and 'FAV MARKER'. The next row has 'EPG'. The bottom row has 'NETFLIX', 'APP', 'YouTube', and 'Prime Video'. The final row has 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. At the very bottom, there is a 'Mandis shop' logo and the website 'www.mandis.tv'.

| Original    | Replacement                                                                                             | Original   | Replacement                                                                                               |
|-------------|---------------------------------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------|
| On/Off      |  Power                 | Info       |  Info / Angle          |
| Mute        |  Mute / Dimmer         | Menu Left  |  Left                  |
| Update      |  Play / Slow           | OK Enter   |  OK                    |
| Reveal      |  Pause / Step / Freeze | Menu Right |  Right                 |
| Txt Stop    |  Stop / Hold           | Menu Off   |  Exit / Cancel / Clear |
| Menu audio  |  Audio / Lang I/II     | Menu Down  |  Down                  |
| Subt.List   |  Subtitle / EQ         | Back       |  Back / Return         |
| Surround    |  Eject / Surround      | Volume+    |  Vol+                  |
| 4.# 16:9    |  Picture / Format      | Browse     |  Smart / List          |
| Txt Expand  |  Zoom / Size           | Chan.Up    |  CH+ / Page+           |
| Sleep Timer |  Sleep / Timer        | Volume-    |  Vol-                 |
| Return TV   |  TV/Radio /          | Display    |  Display / Media     |
| Menu video  |  D.Menu / Top        | Chan.Down  |  CH- / Page-         |
| Text        |  Text / Goto         | 1          |  1                   |
| TV/AV       |  AV / Input / RDS    | 2          |  2                   |
| Menu        |  Menu / Home         | 3          |  3                   |
| Menu Up     |  Up                  | 4          |  4                   |



| Original       | Replacement                                                                                                                                                               |                             | Original | Replacement |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|----------|-------------|
| 5              |                                                                                          | 5                           |          |             |
| 6              |                                                                                          | 6                           |          |             |
| 7              |                                                                                          | 7                           |          |             |
| 8              |                                                                                          | 8                           |          |             |
| 9              |                                                                                          | 9                           |          |             |
| Guide -/-- 1.  |                                                                                          | Guide / EPG / -/--          |          |             |
| 0/10           |                                                                                          | 0                           |          |             |
| 2.Fav P/C 2.   |                                                                                          | Fav / Marker / PC           |          |             |
| Red            |                                                                                          | Red / Netflix / Search      |          |             |
| Green          |                                                                                          | Green / APP / Repeat        |          |             |
| Yellow         |                                                                                         | Yellow / YouTube / Repeat   |          |             |
| Blue           |                                                                                        | Blue / Prime Video / Random |          |             |
| Nicam/Mono     |  +  | Shift + Audio / Lang I/II   |          |             |
| Mix Scan       |  +  | Shift + Text /              |          |             |
| Level L        |  +  | Shift + Left                |          |             |
| Level R/Woofer |  +  | Shift + Right               |          |             |
| 3.*            |  +  | Shift + 3                   |          |             |

